

How To Raise An Evacuation Alert

Trigger an evacuation using the process below.



1) In an evacuation emergency press the EVACUATE button in the middle

2) A **BLUE** light next to **STANDBY** indicates the alert is raised and a high pitched sound will ring for 3 seconds



3) A **GREEN** light next to **SIREN ON** and a high pitched sound ringing for 3 seconds indicates all sirens in the network - including sirens on the dual triggers + siren devices - will start sounding



4) The evacuation can be ended in three ways:

- by pressing the CANCEL button on the triggering device
- by pressing the END EVACUATION button on the TCU or smartphone app
- by letting the evacuation alert run its course (6 minutes by default)